


Ignition Switch

Test

1. Remove the dashboard lower panel.
2. Disconnect the 4-P connector from the dash fuse box and 5-P connector from the main wire harness.
3. Check for continuity between the terminals in each switch position according to the table.

| Terminal Position | WHT/RED (ACC) | WHT/BLK (BAT -B) | BLU/WHT (IG2 -B) | WHT/BAT (-A) | BLK/YEL (IG1) | YEL (IG2 -A) | BLK/WHT (ST) |
|-------------------|---------------|------------------|------------------|--------------|---------------|--------------|--------------|
| O | | | | | | | |
| I | ○ | ○ | | | | | |
| II | ○ | ○ | ○ | ○ | ○ | ○ | |
| III | | | | ○ | ○ | | ○ |

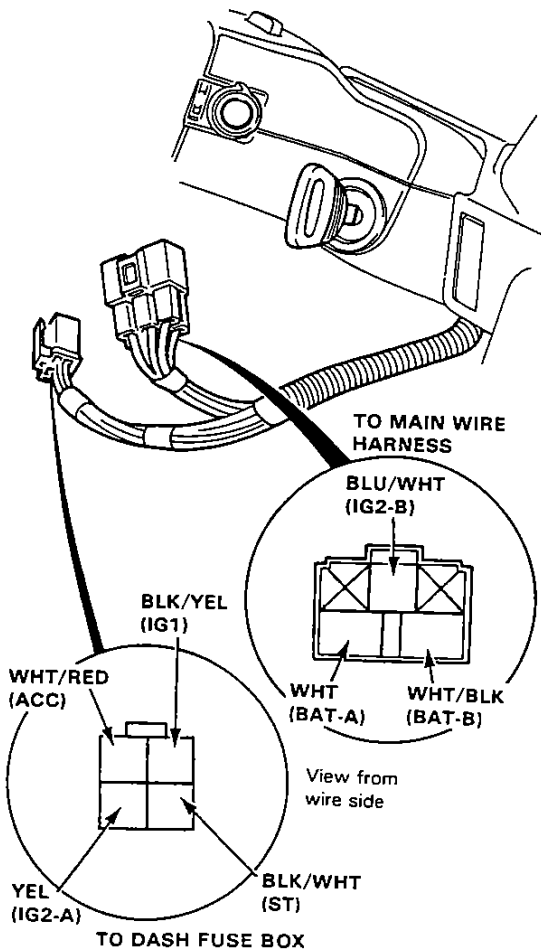

Electrical Switch Replacement

1. Remove the dashboard lower panel.
2. Remove the steering column lower cover.
3. Disconnect the 4-P connector from the dash fuse box and 5-P connector from the main wire harness.
4. Insert the key and turn it to "0."
5. Remove the 2 screws and replace the base of the switch

