


Ignition Switch

Test

1. Remove the dashboard lower panel.
2. Disconnect the 4-P connector from the dash fuse box and 5-P connector from the main wire harness.
3. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	WHT/ RED (ACC)	WHT/ BLK BAT -B	BLU/ WHT IG2 -B	WHT BAT -A	BLK/ YEL (IG1)	YEL IG2 -A	BLK/ WHT (ST)
O							
I	—	—					
II	—	—	—	—	—	—	
III				—	—	—	—

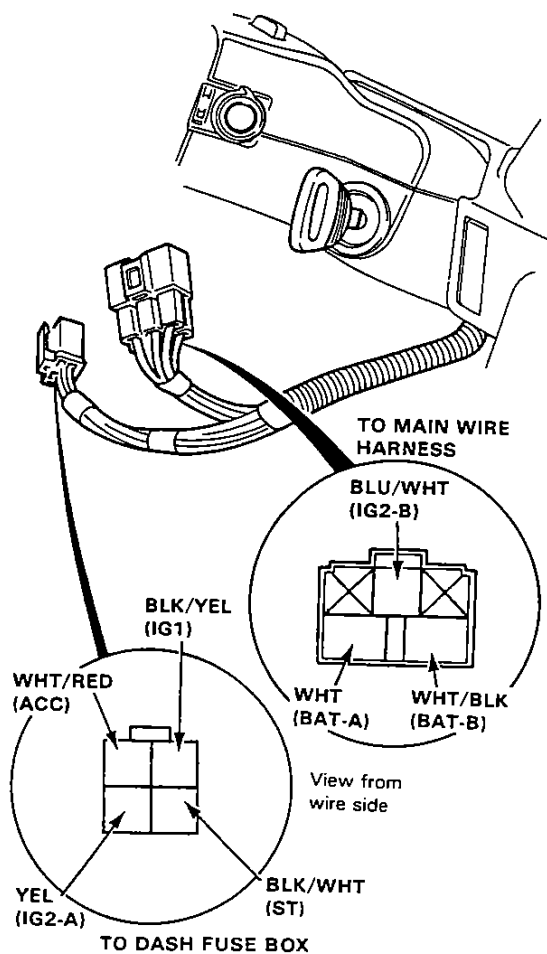

Electrical Switch Replacement

1. Remove the dashboard lower panel.
2. Remove the steering column lower cover.
3. Disconnect the 4-P connector from the dash fuse box and 5-P connector from the main wire harness.
4. Insert the key and turn it to "O."
5. Remove the 2 screws and replace the base of the switch

